

Eclipse ThermAir Burners

Model TA0075





Data sheet Edition 04.18

Version 3

Parameter		Specification
		Packaged Blower Size
Maximum Input, Btu/h (kW)^{1 2} <i>To maintain 15% air with the standard air orifice and standard combustion air blower</i>	Chamber Pressure "w.c. (mbar)	6" w.c. 3(Nominal 50 & 60 Hz)
	-1.0 (-2.5)	814,000 (238)
	0.0 (0.0)	750,000 (220)
	1.0 (2.5)	705,000 (206)
Minimum Input, Btu/h (kW) <i>For lower inputs, contact Eclipse, Inc.</i>	Natural Gas	25,000 (7.3)
	Propane	25,000 (7.3)
	Butane	25,000 (7.3)
Main Gas Inlet Pressure, "w.c. (mbar) <i>Fuel pressure in gas inlet (Tap B)</i>		5.3 (13.2)
High Fire Visible Flame Length, inches (mm) <i>Measured from the outlet end of the combustor</i>	Natural Gas	39 (990)
	Propane, Butane	43 (1092)
Maximum Chamber Temperature, °F (°C) <i>For higher temperatures, contact Eclipse, Inc.</i>	Alloy Tube	1500 (820)
	SiC Tube	1900 (1040)
Flame Detection		Flamerod or UV Scanner
Fuels⁴ <i>For any other mixed gases, contact Eclipse, Inc.</i>		Natural Gas, Propane or Butane
Blower Motor Power, Hp		6" w.c. @ 8250 scfh, 0.33 hp
Weight, lbs (kg)⁴	With Blower	119 (54)
	Without Blower	79 (36)
Approvals		

1. Maximum inputs are given for the standard packaged combustion air blower without an air filter.
2. Blower motor service factors greater than 1.0 may be required when firing into negative chamber pressure applications. For specific application questions, contact Eclipse.
3. See Design Guide 114 for more information about typical fuel composition and properties.
4. All weights are approximate.
 - All information based on laboratory testing in neutral (0.0" w.c.) chamber with standard combustion design. Different chamber conditions and/or combustor design will affect the data.
 - All inputs are based upon gross calorific values and standard conditions: 1 atmosphere, 70°F (21°C).
 - Eclipse reserves the right to change the construction and/or configuration of our products at any time without being obliged to adjust earlier supplies accordingly.

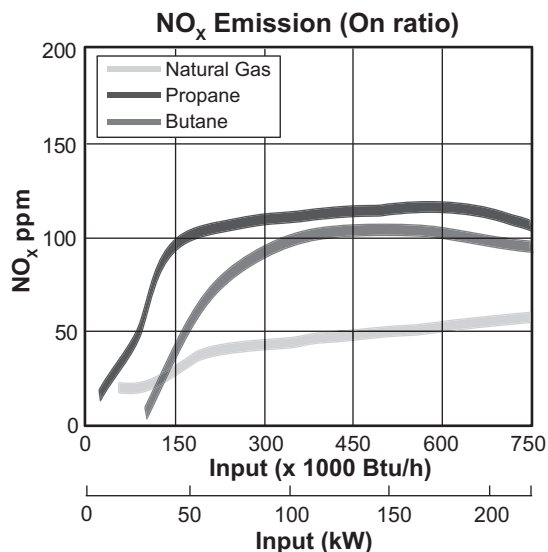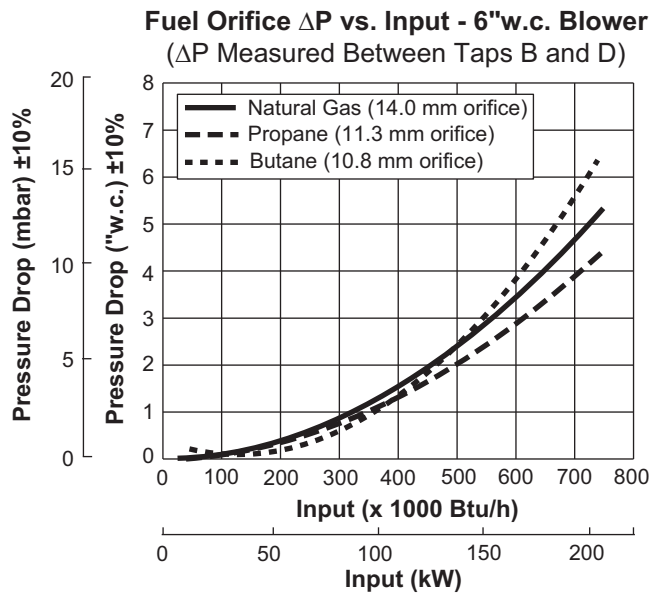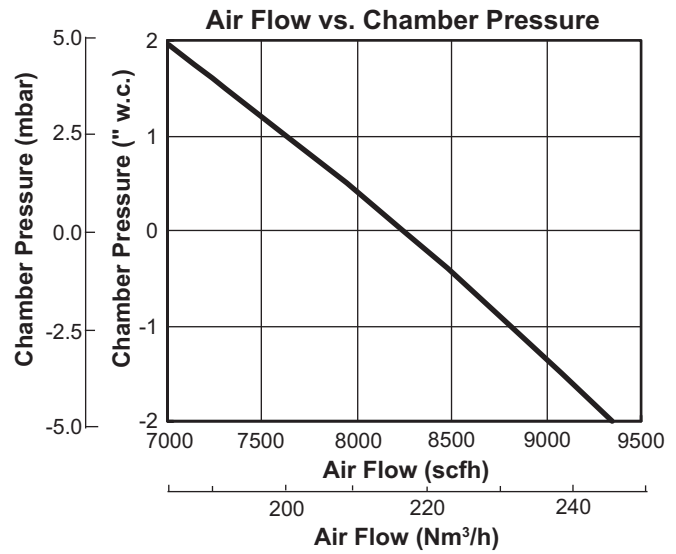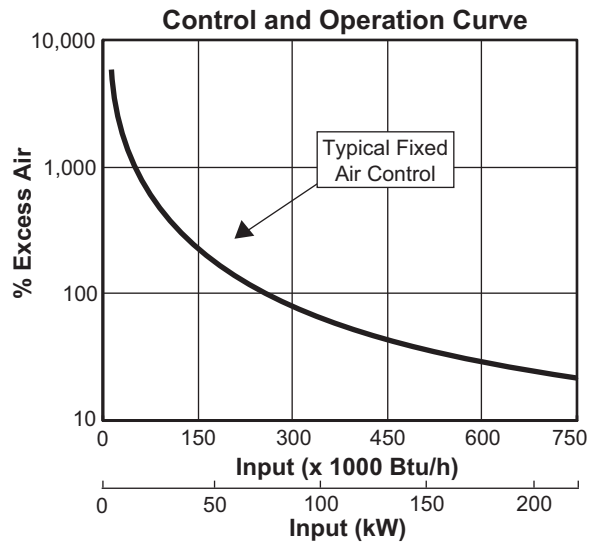Performance Graphs



NO_x emission data is given for:

- Ambient combustion air $\sim 70^{\circ}\text{F}$ (21°C)
- Minimal process air velocity
- ppm volume dry at 3% O₂
- Neutral chamber pressure

Emissions are influenced by:

- Chamber conditions
- Fuel type
- Firing rate
- Ratio regulator adjustment
- Combustion air temperature

CO emission is largely influenced by chamber conditions. Contact your local Eclipse representative for an estimate of CO emission on your application.


Dimensions and Specifications

Dimensions in mm (inches)


Blower Type	C
60 Hz (6" w.c.)	482 (19.0)
50 Hz (6" w.c.)	533 (21.0)

Combustor Type	D
Straight Alloy Tube	114.3 (4.5)
Straight Silicon Tube	120.4 (4.7)









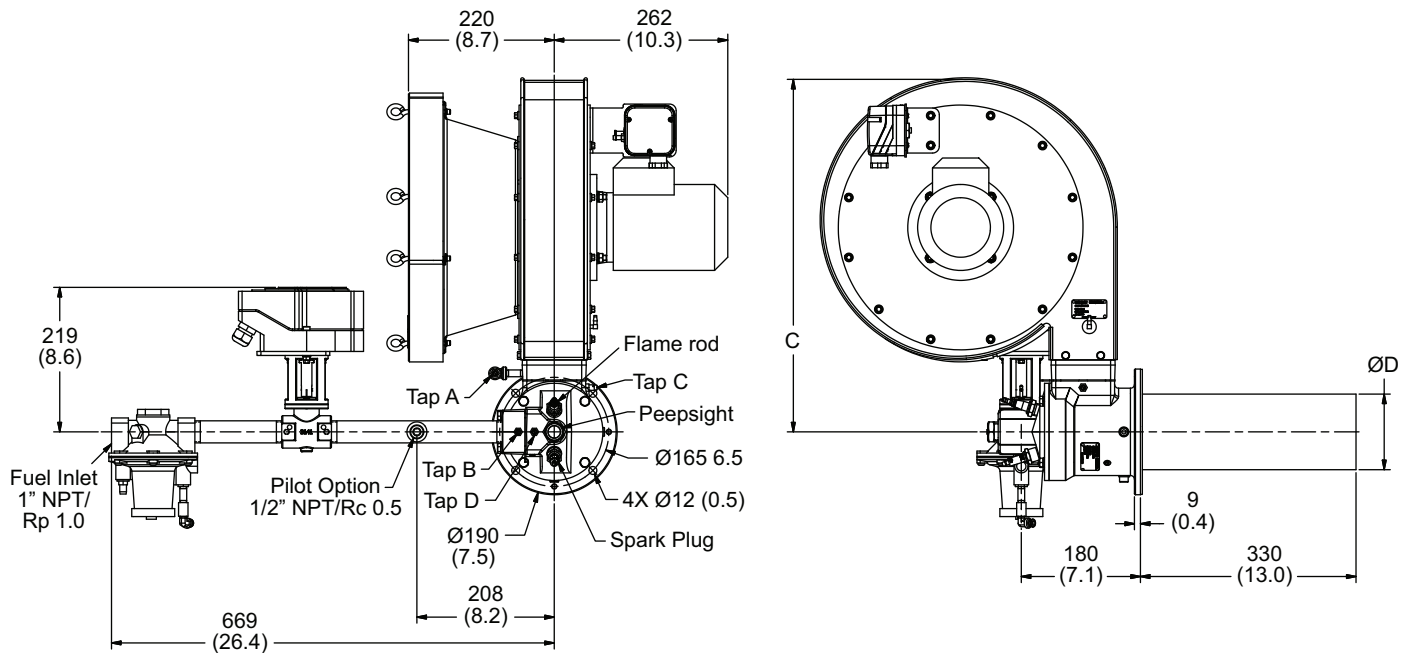
Packaged Blower



Remote Blower

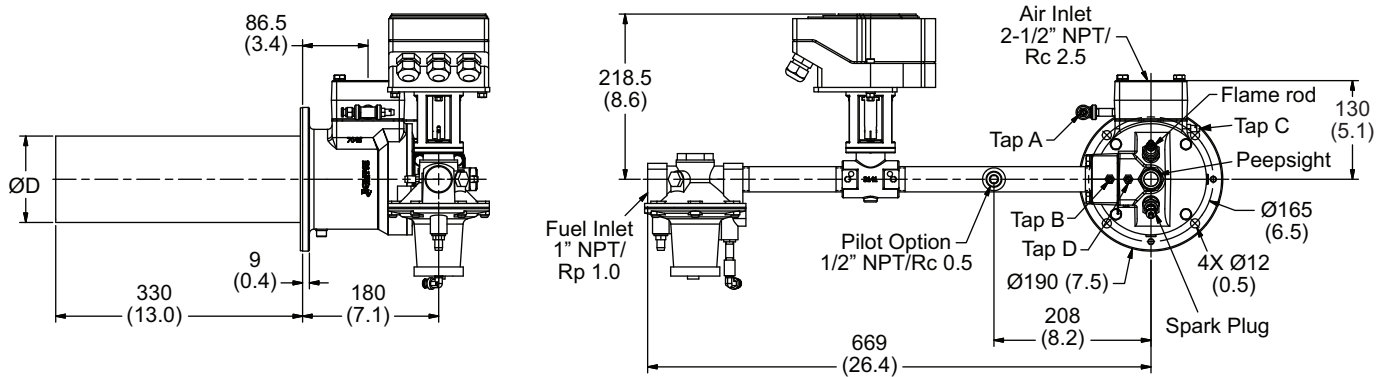

Piping

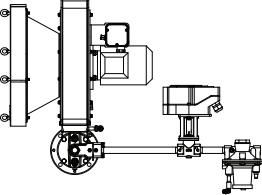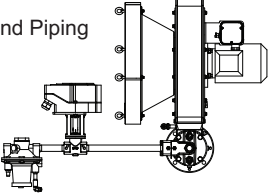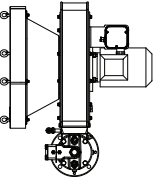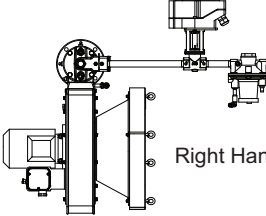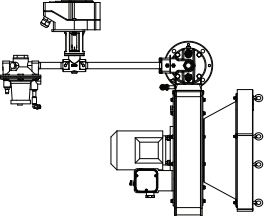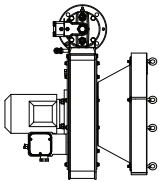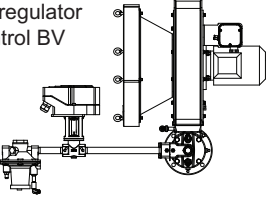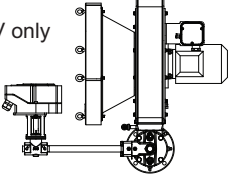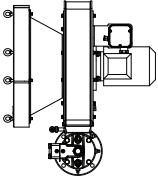Orientation (All illustrations indicate right hand blower motor.)*		Piping Options
Upright Right Hand Piping  Left Hand Piping  No Piping 	Inverted Right Hand Piping  Left Hand Piping  No Piping 	With ratio regulator and control BV  With control BV only  Less ratio regulator and control BV 

*Even though the blower motor is on the "left" side of the inverted units, it is still a "right hand" motor in relationship to the blower assembly.